

G-Control ECOMBI SSH Radiator

Quick User Guide



A 1. SAFETY FIRST

- · Keep **25 cm** away from flammable objects.
- Never cover or use heater to dry clothes.
- Supervise children at all times.
- Press + and simultaneously until appears to lock screen. Do the same to unlock the screen.
- Turn off at the **main wall switch** before cleaning or servicing.

2. TURNING ON/OFF

- Use power switch hidden on back right side of radiator.
- 2. Do not turn off main wall switch unless cleaning or servicing.
- 3. Press any button to wake screen.
- 4. Backlight turns off automatically.

3. SETTING TIME

- 1. Press any button.
- 2. Hold tuntil 'Func' flashes.
- 3. Use + to scroll to clock icon and press **OK**.

Set **Hour > Minute** using +/- and **OK**.

Then set today's weekday (1 = Mon, 2 = Tues, 3 = Wed, etc.)

4. SET TEMPERATURES

Defaults:

- Comfort = 21 °C
- **→** Economy = 18 °C
- **X** Frost = 3 °C

To change:

Hold trunc' flashes and adjust each using +/-, confirm with **OK.**

5. SET MODE

From Func menu, choose between:

- Program 'PRG' normal use on Economy 7
- Frost when you are going away
- Manual if on standard tariff

Press **OK** to confirm.



6. SET PROGRAM (Daily Heating Schedule)

Each **hour** can be set to:

- 2 bars = Comfort
- 1 bar = Economy
- * 0 bars = Frost

Hold **OK** until 'CP12' shows to copy to Tuesday. Hold **OK** again until 'CP23' shows to copy to Wednesday, etc.

7. SET CHARGE TIMES (Off-Peak)

Default on Economy 7: 00:00-07:00.

From **Func**, find 'PArA'.

Set:

- · UP02: Start time of off-peak tariff
- · UP03: End time of off-peak tariff (optional)
- UP04/UP05: Second period (optional)

RESET TO FACTORY

Hold **OK** and the until 'SrES' shows and confirm with **OK**.

COMMONISSUES

- **No heat?** Check power, mode and airflow.
- Not warm enough? Check target temp and UP08 - balancing element should be on.

CLEANING

Turn **off power** fully. Wipe with **dry soft cloth** only. No water or cleaning sprays.

Full user guide available at Reception.